



## Part Number 156065P

Pre-Oiled Air Filter + Dust Cover incl. cage  
Can-Am Maverick X3 / X3 Max

### Instructions:

#### Parts to be installed

Orange wire cage, Pre-Oiled Air Filter and Dust Cover. Insert the orange wire cage inside the Pre-Oiled Air Filter. The dust cover needs to be assembled on the outside of the filter between the two lines.

Picture 1:



Picture 2:




[Assembled parts]

### Air Filter Installation


#### Step 1:

Remove the Airbox Cover (picture 3) and OEM Air Filter (picture 4).

Picture 3:

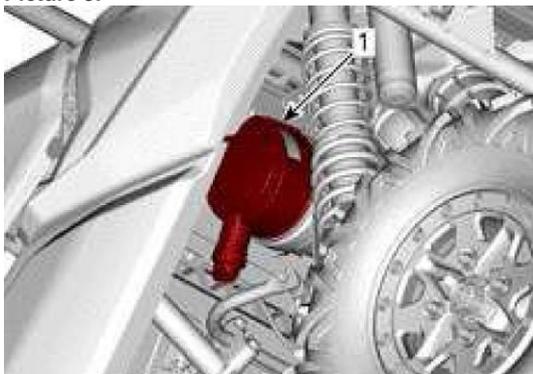

Picture 4:

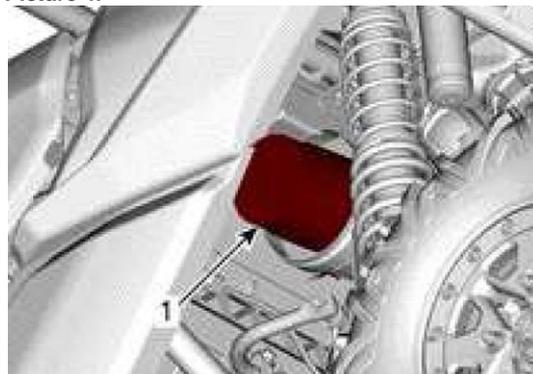



Step 2:

Install the Twin Air Filter (picture 5 + 6). Side A, the open end (bottom) , goes first into the airbox. Side B is the closed end (top). Install the Filter and securely clamp it into place before closing the airbox again.

Picture 5:



Picture 6:



**Twin Air Parts and Accessories**

- PowerFlow Replacement Air Filter: #156065

**Twin Air Cleaning and Oiling Products**

- Bio Dirt Remover: #159004
- Liquid Bio Power: #159017
- Bio Pack (Dirt Remover / Liquid Power): #159020
- Bio Spray: #159018M
- Twin Air Bio System: #159000BIO

For more details or to purchase these or other Twin Air products go to [www.twinair.com](http://www.twinair.com), [www.twinairusa.com](http://www.twinairusa.com) or visit your local Twin Air Authorized Dealer.